


BULB INSTALLATION



Step 1

Turn reset switch to OFF. Disconnect power supply. Curl the flex tube.

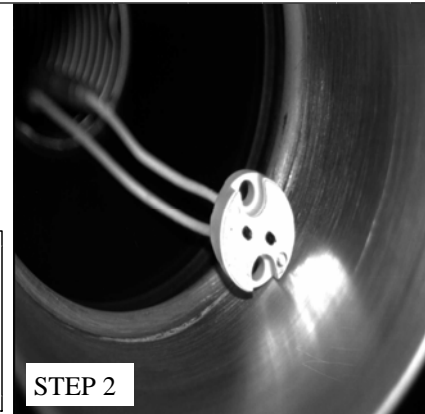

Step 2

Retrieve the bulb socket from within the bulb shield.



Step 3

Insert a VL2001/VL7001 halogen bulb into the bulb socket. Use VL2001/VL7001 halogen bulbs only.

Step 4

Insert VL2001/VL7001 bulb into the bulb spring. Insert the open end of the bulb spring assembly into the bulb shield first.

The open end of the bulb spring should rest in the bulb shield channel. Now complete the procedure by forcing the closed end of the bulb spring into the opposite side of the bulb shield.

Reconnect power supply. Turn reset switch to RESET. Test operation. Installation is complete.

